

OSAS + OSM = OVER STROKE ACTIVE SAFETY + OVER STROKE MARKER

Il nuovo codice sarà fornito solo ad esaurimento del vecchio
 The new code will be supplied only when the old will be out of stock
 Der neue Kode wird nur angegeben, wenn der alte nicht mehr lieferbar ist
 Le nouveau code sera fourni uniquement lorsque le vieux stock sera écoulé
 El nuevo código será suministrado sólo cuando se agoten las existencias del antiguo
 O novo código irá ser fornecido apenas quando o antigo esgotar stock

ACTIVE SAFETY



OSAS



USAS



OPAS





SKUDO

easu MANIFOLD p. 247



* F_{1i} = Isothermal end force at 100% Cu p. 16

** F_{1p} = Polytrophic end force at 100% Cu



		ΔP $\pm 0,33\% / ^\circ C$	P max 150 bar 2175 psi	P min 20 bar 290 psi	S 3,14 cm ² 0.487 in ²	SPM ~ 20 - 100 (at 20°C)	Max Speed 1,8 m/s 70.8 in/s	Maintenance kit 39BMRV00500C		
CODE PHASING OUT from 04/2021		Cu mm inch	L mm inch	L min mm inch	F₀ Initial force daN lb	F_{1i} * End force * daN lb	F_{1p} ** End force ** daN lb	V₀ cm ³ in ³	 ~Kg ~lb	 2014/68/EU
NEW										
RS 500 - 007 - A	◆ RS 500 - 007 - B	7 0.28	50 1.97	43 1.69	470 1057 ± 5% 150 bar 2175psi + 20 °C +68 °F	611 1375	697 1567	11,2 0.68	0,24 0.53	✓
RS 500 - 010 - A	◆ RS 500 - 010 - B	10 0.39	56 2.20	46 1.81		642 1443	743 1671	13,7 0.84	0,25 0.55	✓
RS 500 - 013 - A	RS 500 - 013 - B	13 0.51	62 2.44	49 1.93		664 1493	778 1749	16,3 0.99	0,26 0.57	✓
RS 500 - 016 - A	RS 500 - 016 - B	16 0.63	68 2.68	52 2.05		682 1532	805 1810	18,9 1.15	0,28 0.62	✓
RS 500 - 022 - A	RS 500 - 022 - B	22 0.87	80 3.15	58 2.28		707 1588	845 1899	24,0 1.46	0,31 0.68	✓
RS 500 - 029 - A	RS 500 - 029 - B	29 1.14	94 3.70	65 2.56		726 1632	876 1968	29,9 1.82	0,34 0.75	✓
RS 500 - 035 - A	RS 500 - 035 - B	35 1.38	106 4.17	71 2.80		738 1659	895 2011	35,0 2.14	0,37 0.82	✓
RS 500 - 047 - A	RS 500 - 047 - B	47 1.85	130 5.12	83 3.27		754 1695	921 2070	45,2 2.76	0,42 0.93	✓
RS 500 - 060 - A	RS 500 - 060 - B	60 2.36	156 6.14	96 3.78		765 1721	939 2111	56,3 3.44	0,48 1.06	✓
RS 500 - 072 - A	RS 500 - 072 - B	72 2.83	180 7.09	108 4.25		773 1737	951 2138	66,5 4.06	0,54 1.19	✓
RS 500 - 077 - A	RS 500 - 077 - B	77 3.03	190 7.48	113 4.45		775 1742	955 2147	70,8 4.32	0,56 1.23	✓
RS 500 - 097 - A	RS 500 - 097 - B	97 3.82	230 9.06	133 5.24		783 1759	967 2174	87,8 5.36	0,66 1.46	✓
RS 500 - 122 - A	RS 500 - 122 - B	122 4.80	280 11.02	158 6.22		789 1773	977 2197	109,1 6.66	0,77 1.70	✓

◆ Disposable

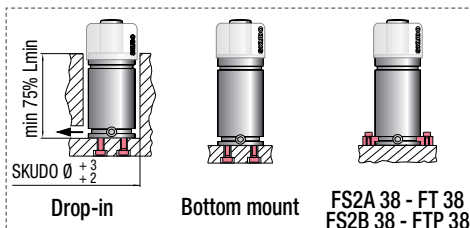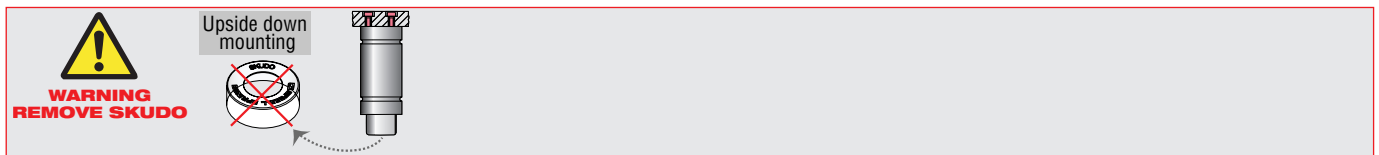

HOW TO ORDER

p. 73

INSTALLATION GUIDELINE

p. 205